
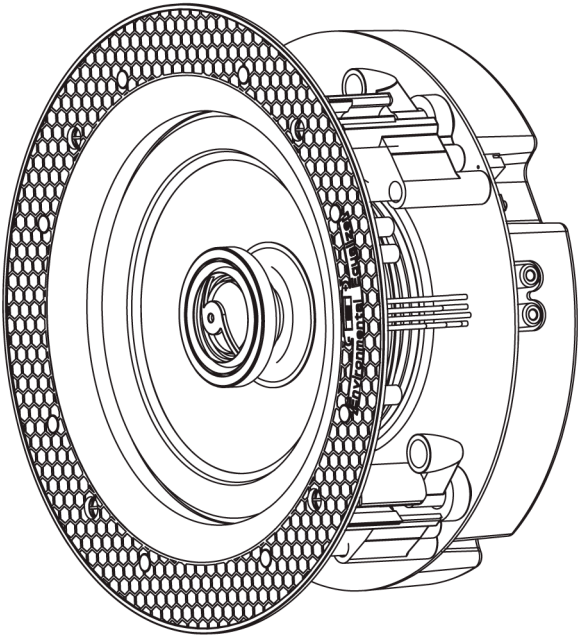


**Airplay Function**

For iPhone, iPad and iMac smart device, you can use the Wi-Fi speaker with Airplay function. In the pull-up menu, click Airplay and choose the Wi-Fi speaker, then the sound of music, game and video in your IOS devices can be played through the Wi-Fi music.

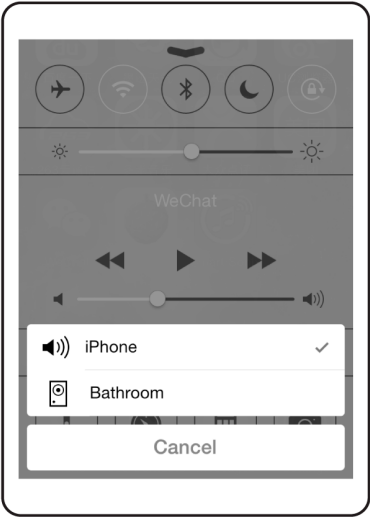

**USER MANUAL**  
**MULTI-ROOM MUSIC SOLUTION**

## SPECIFICATION

**Wi-Fi feature:**

- Built-in Wi-Fi
- Wireless network compatibility 802.11b/g/n
- Support online audio streaming media
- Support audio format: MP3/WMA/AAC/ACC/ACC+/ALAC/APE/WAV


**Amplifier feature:**

- Type: Class D(digital)
- RMS Power:2\*50W/8ohm
- Power input :DC24V/5A


**Speaker:**

- Frequency response:65Hz-20KHz
- RMS power:60W
- Impedance:8 ohms
- Sensitivity(1w/1m):90dB
- Woofer:6.5"Kevlar woven cone
- Tweeter:1.2" Titanium dome
- Treble attenuation:+3dB/-3dB


## PACKAGE CONTENTS

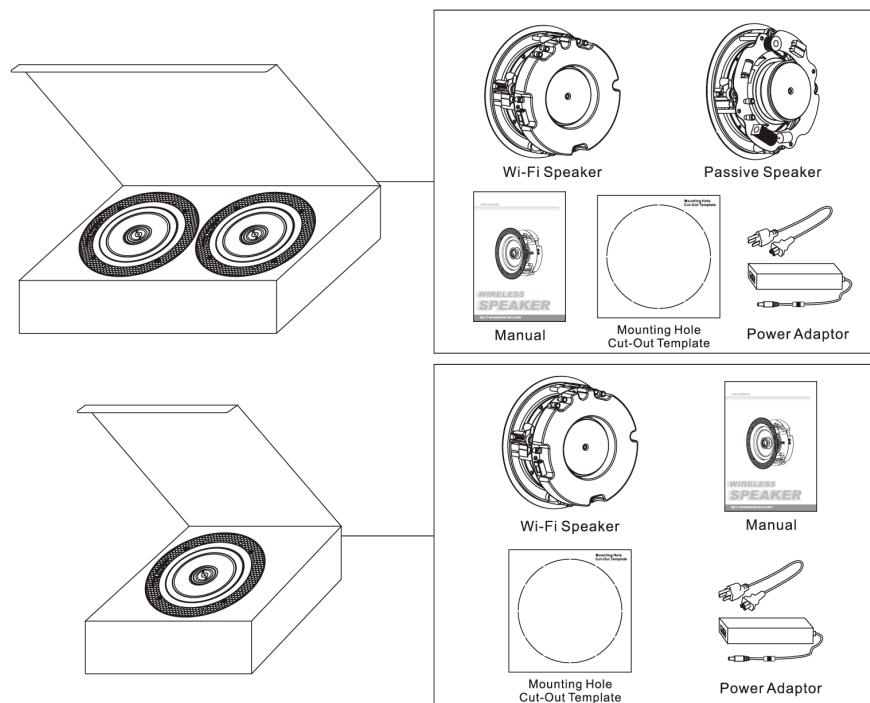


**Step 3** Connect the jack of DC adaptor to the Wi-Fi speaker and install the speaker into ceiling. The installed place should be in accordance with the name you have set in the controller APP.

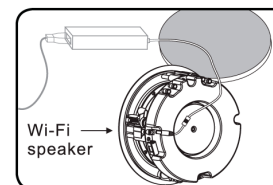


**Step 4** To enjoy stereo sound and achieve better sound quality, you can install another passive speaker to be paired with the Wi-Fi speaker. Lying loudspeaker cable from passive to the R+ and R- connectors of the Wi-Fi speaker.

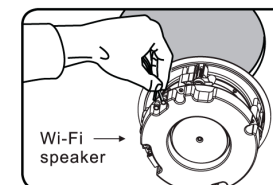

Lying diagram between Wi-Fi speaker and passive speaker or home TV set. Cables should be laid before Wi-Fi speaker installed.

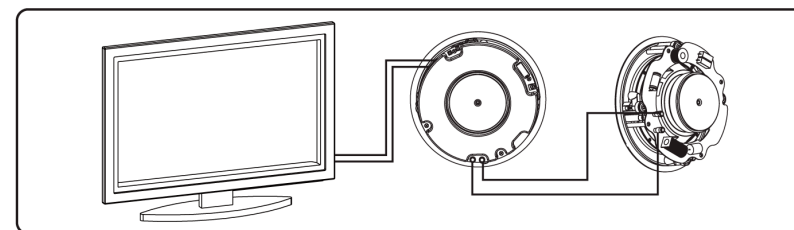

**Step 5** Cover the grille for the installed speaker and connect the plug of DC adaptor to the power supply.

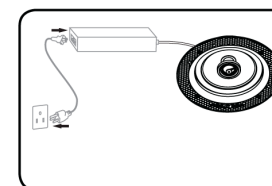**Device Firmware Upgrading**

Solution 1: Scan the QR code to re-install the controller APP

Solution 2: choose in your

**Device Resetting**

If the multi-room network fails during operation, you can press the WPS button to restore the speaker to its original factory default settings.

Uninstall the Wi-Fi speaker from ceiling and press the WPS button for around 5 seconds, during this operation, make sure the speaker is power supplied.

**Device Personal setting**

Rename: If you found Wi-Fi speaker wrongly named after installation, you can rename the device into a correct one.

Speaker info: Each Wi-Fi speaker will launch wireless signal, to protect the Wi-Fi embedded by others, you can set password for your device.

## CONTROLLERAPP INSTALLATION

### 1. Controller APP Installation




Use your phone to scan the QR code to download controller APP.


### 2. Wi-Fi Speaker testing

Before your Wi-Fi speaker is installed into ceilings, please arrange testing to make sure the device properly works.


**Step 1** Connect the Wi-Fi speaker to power supply

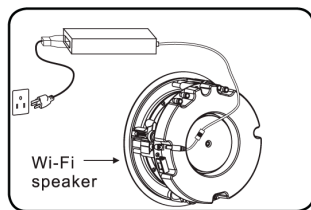


**Step 2** Switch the Wi-Fi function and connect your phone to the Wi-Fi

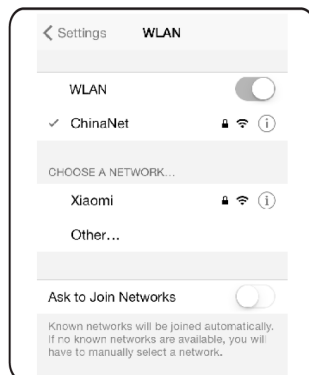


**Step 3** Start the controller APP smartsonix and click ADD DEVICE

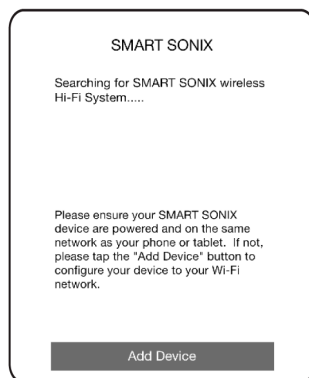


**Step 4** Enter the password of the router and click NEXT. If your router is unavailable in your space, please skip this step and click NEXT directly.

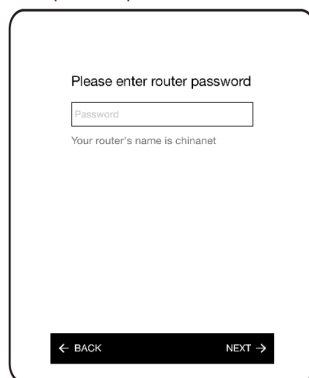


**Step 5** Press the WPS button to configure network and click NEXT.

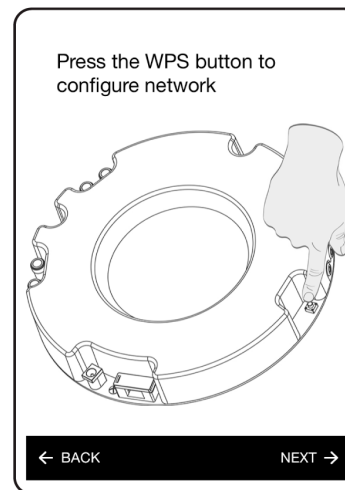


**Step 6** Later a progress diagram comes, wait for a few seconds, the device will be connected to your router automatically. If fails, click RETRY and repeat the operation step 4 and step 5.

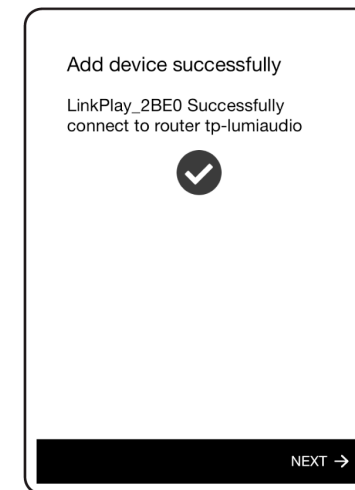


**Step 7** Name the device according to the room you will install and click FINISH.

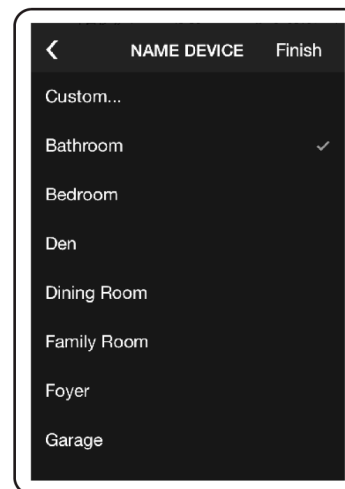

**Step 8** After setting, the Wi-Fi speaker will be in the device list. If you have more than 1 Wi-Fi speakers, add devices and name them accordingly. Multi-room music network is successfully established.

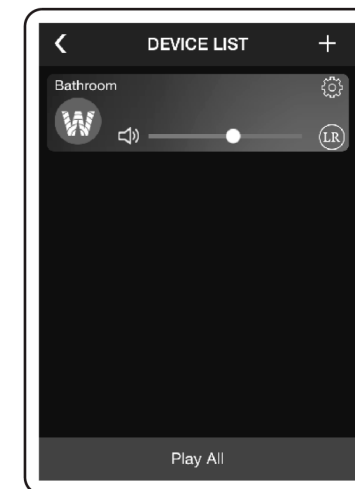


**Step 9** Choose a device and play a song in your phone to test whether the device works. If ok, testing finishes and you can forward the speaker installation.

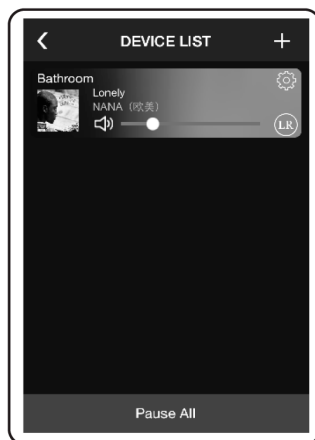


### 3. Wi-Fi Speaker Installation

Equipment you will need:

Besides template that is included in the box, you must have a ladder and the equipment shown below to guarantee installation go smoothly.



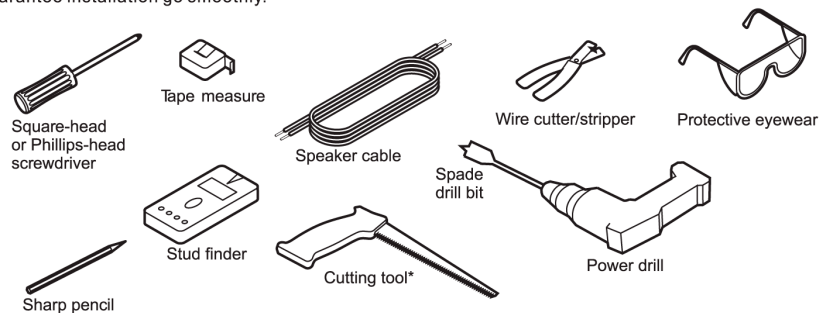


**Step 1** Use enclosed template to mark out the cut out, then simply cut along the line. This is the only cut you will need to make.

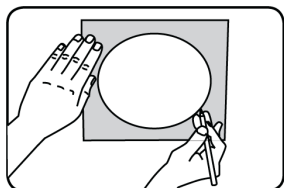

Installation dimension:  $\Phi$  210 mm  
Installation depth: >102mm

**Step 2** Place the DC adaptor in a suitable place in your wall or ceiling, leave the plug end and jack end. During speaker installation, please make sure the adaptor is cut out from power supply.

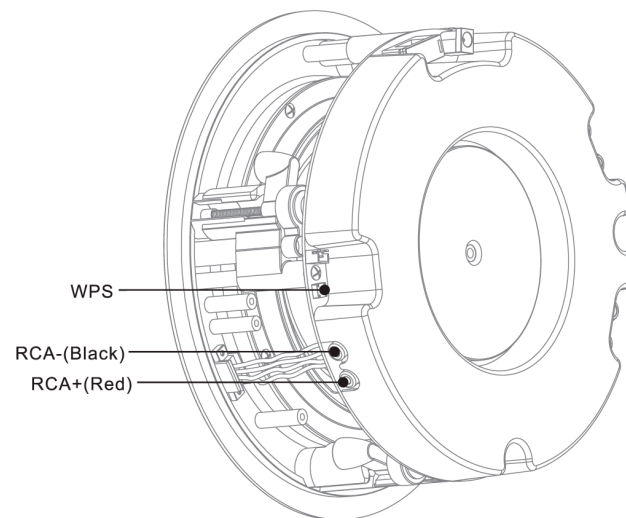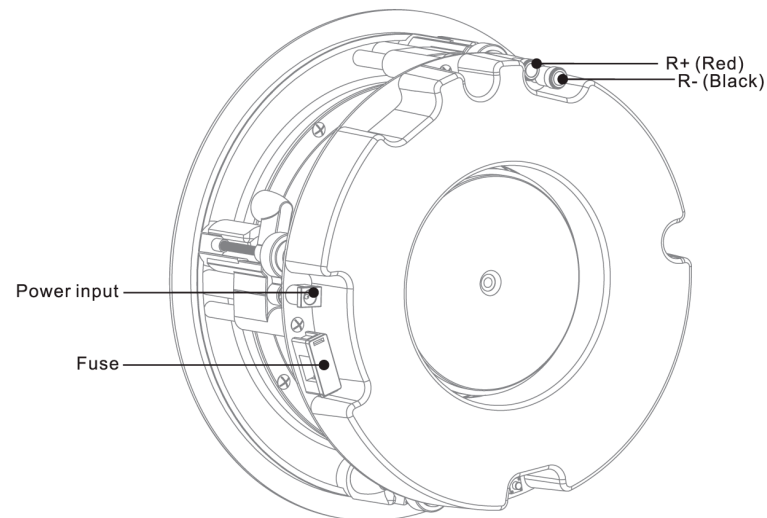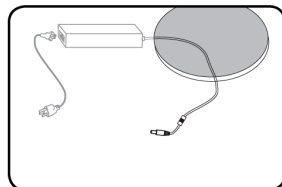

**R+(Red) R-(Black):** to link passive speaker with right channel sound.

**RCA:** to connect with your home TV set.

**Power input:** connect with DC adaptor to offer power supply for the speaker.

**Fuse:** safety device for the Wi-Fi speaker, the wire will melt when electricity fault.

**WPS:** the button to configure multi-room music network or restore the device to original default settings.

**Protection cover:** to protect inner electrical components of the Wi-Fi speaker, don't open this cover without instruction.